

HOLOLENS 2 EASY START

by support | Feb 1, 2021 | Uncategorized | 0 comments

Whats in the Box?



- Hololens 2 Device
- Carrying Case
- Overhead Strap
- Microfibre Cloth
- Charger
- USB-C Cable

Adjust Headset so it is comfortable on the head

On / Off button on the side of the headset

Power bar indicator

USB-C Plug Socket



Log In (Other User)




Email Address: h1@engineering.exchange
Password: XXXXXXXX (Will be provided separately to this document)
Email Address: h2@engineering.exchange
Password: XXXXXXXX (Will be provided separately to this document)


Connect to Wifi




Tap Left Wrist

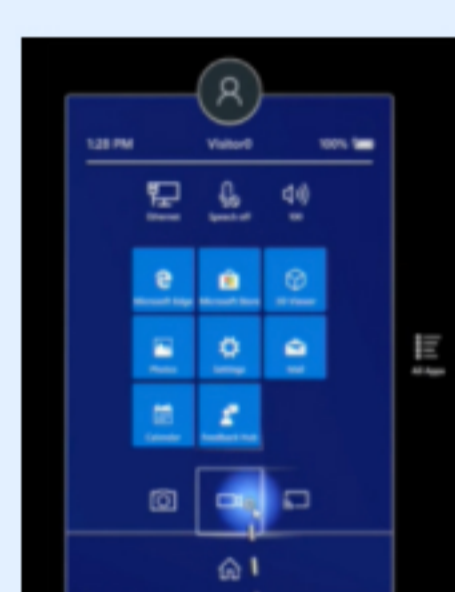

Tap Setting

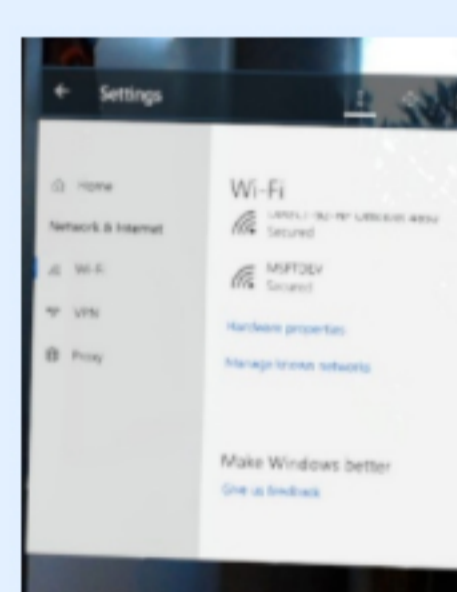


Connect to WiFi, Enter WiFi Key / Password

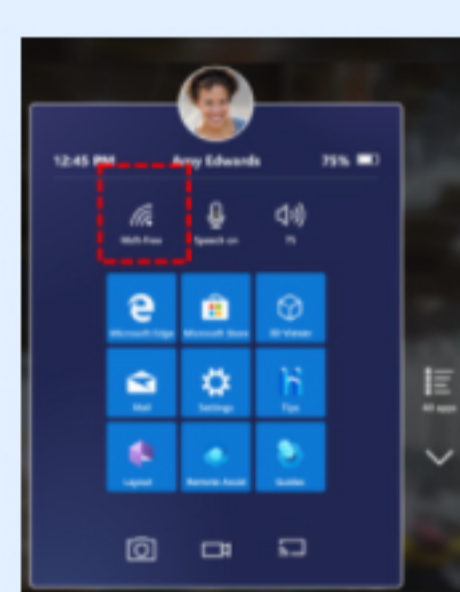


Wifi on home page

Eye Calibration

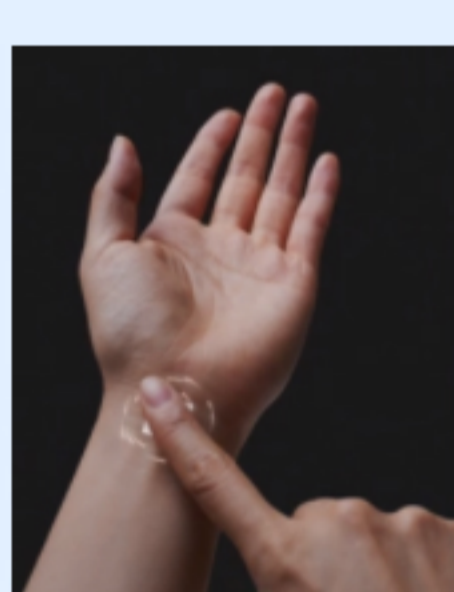


Tap Left Wrist

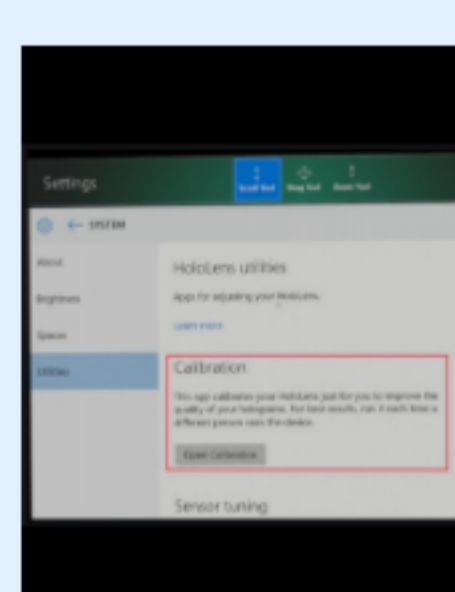

Tap Settings
Open Eye Calibration




Tap Left Wrist

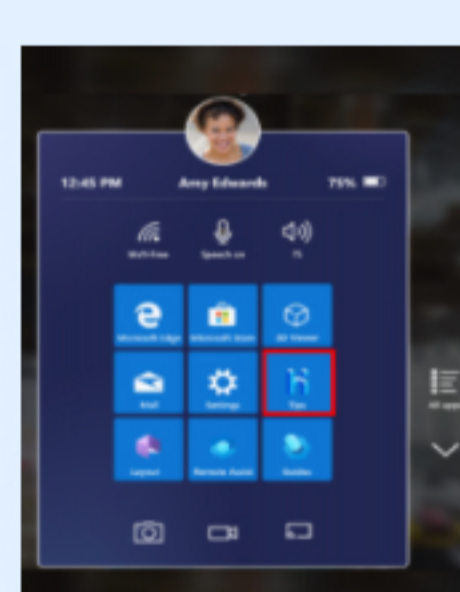


Select Tips
Carry out Training

Training Tips


Recording direct to HoloLens

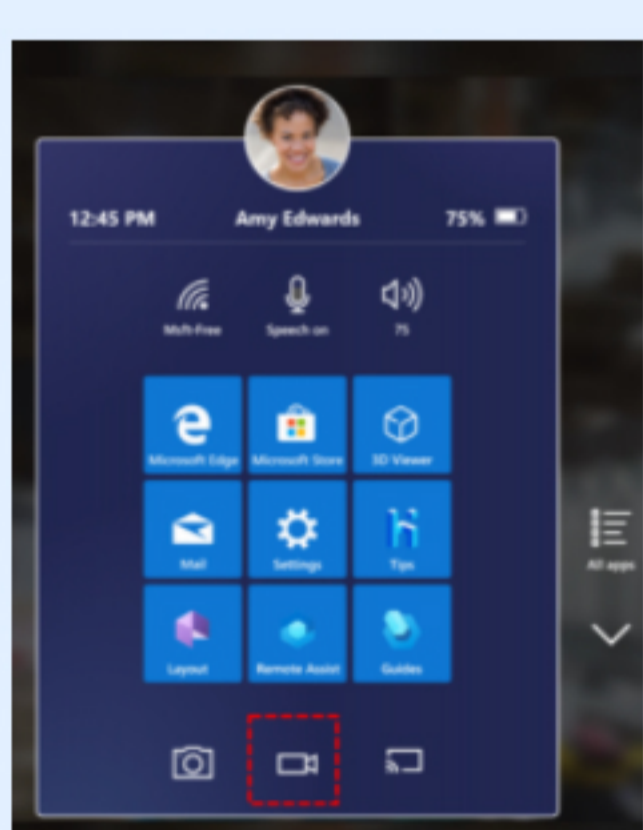

Tap to icon to Record, Tap to Stop
RECORDING TIME = 5 minutes

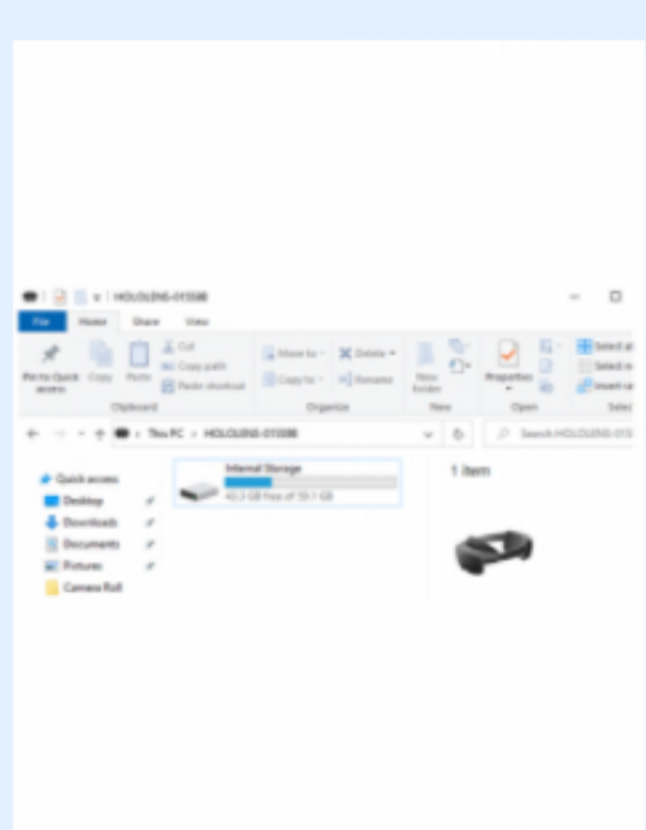


To access the images, use the USB-c to a PC

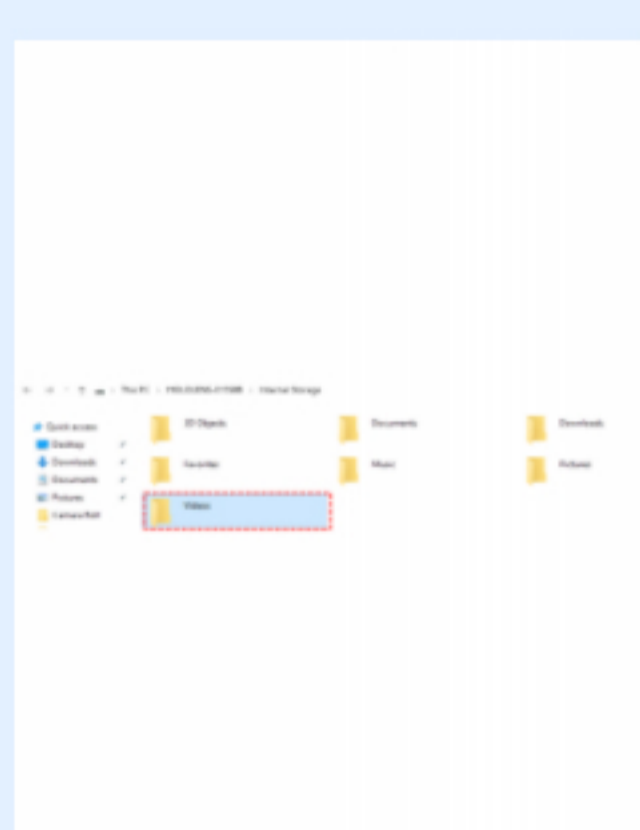


Directory "HOLOLENS..." & stored in the "Videos" directory is your recordings


Remote Assist

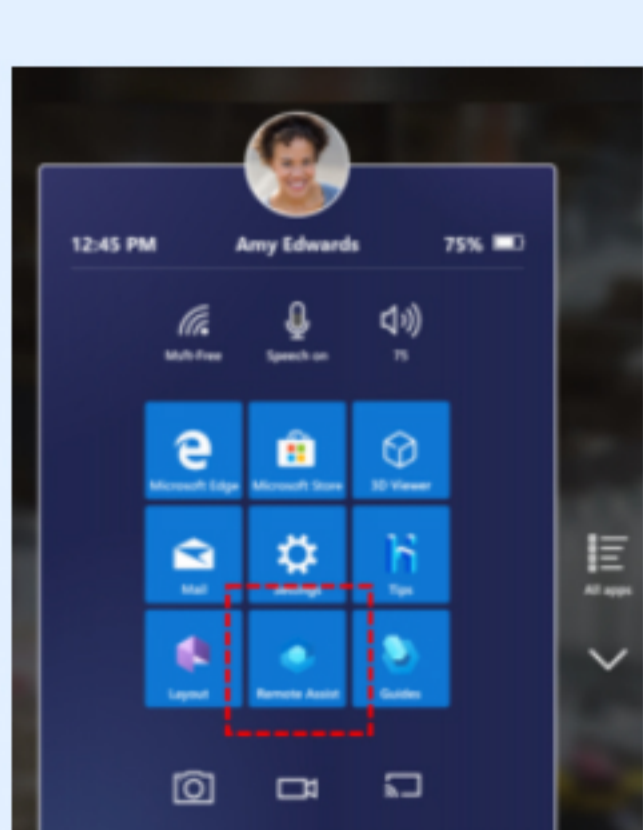

Tap Remote Assist

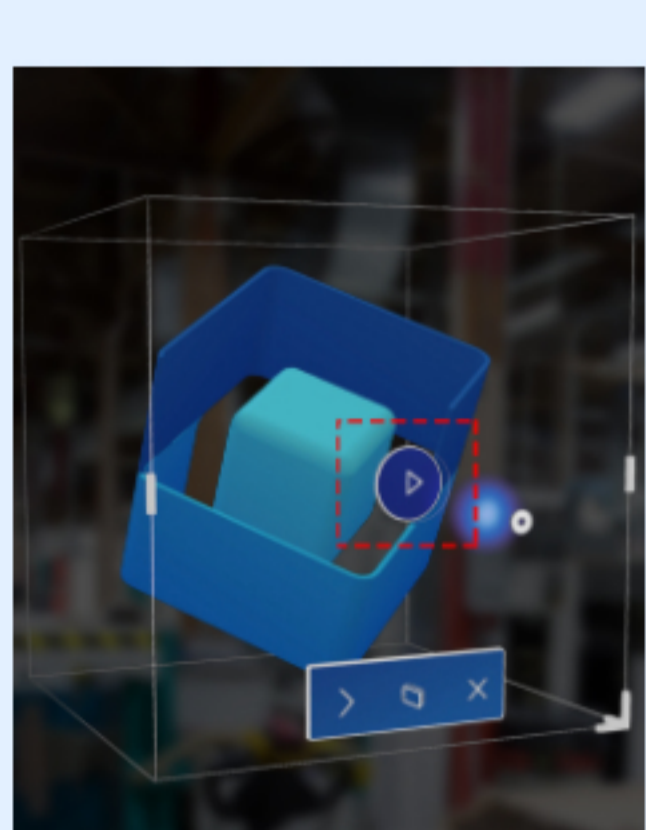

Tap Triangle on RA Cube

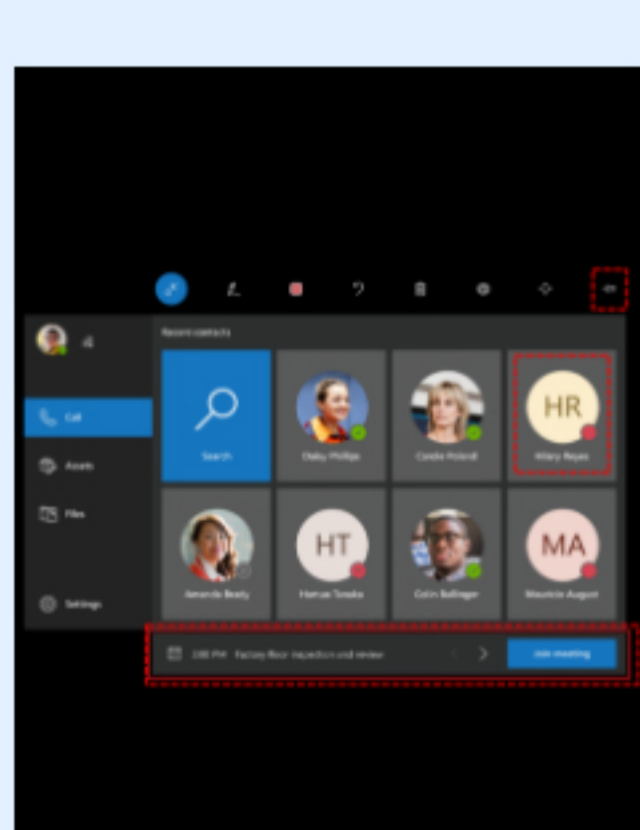

Dial User Direct, or Join via Teams Meeting




For improved visibility PIN the screen



To Find Remote Assist Cube Tap Home Button

Drawing Tools

Pin

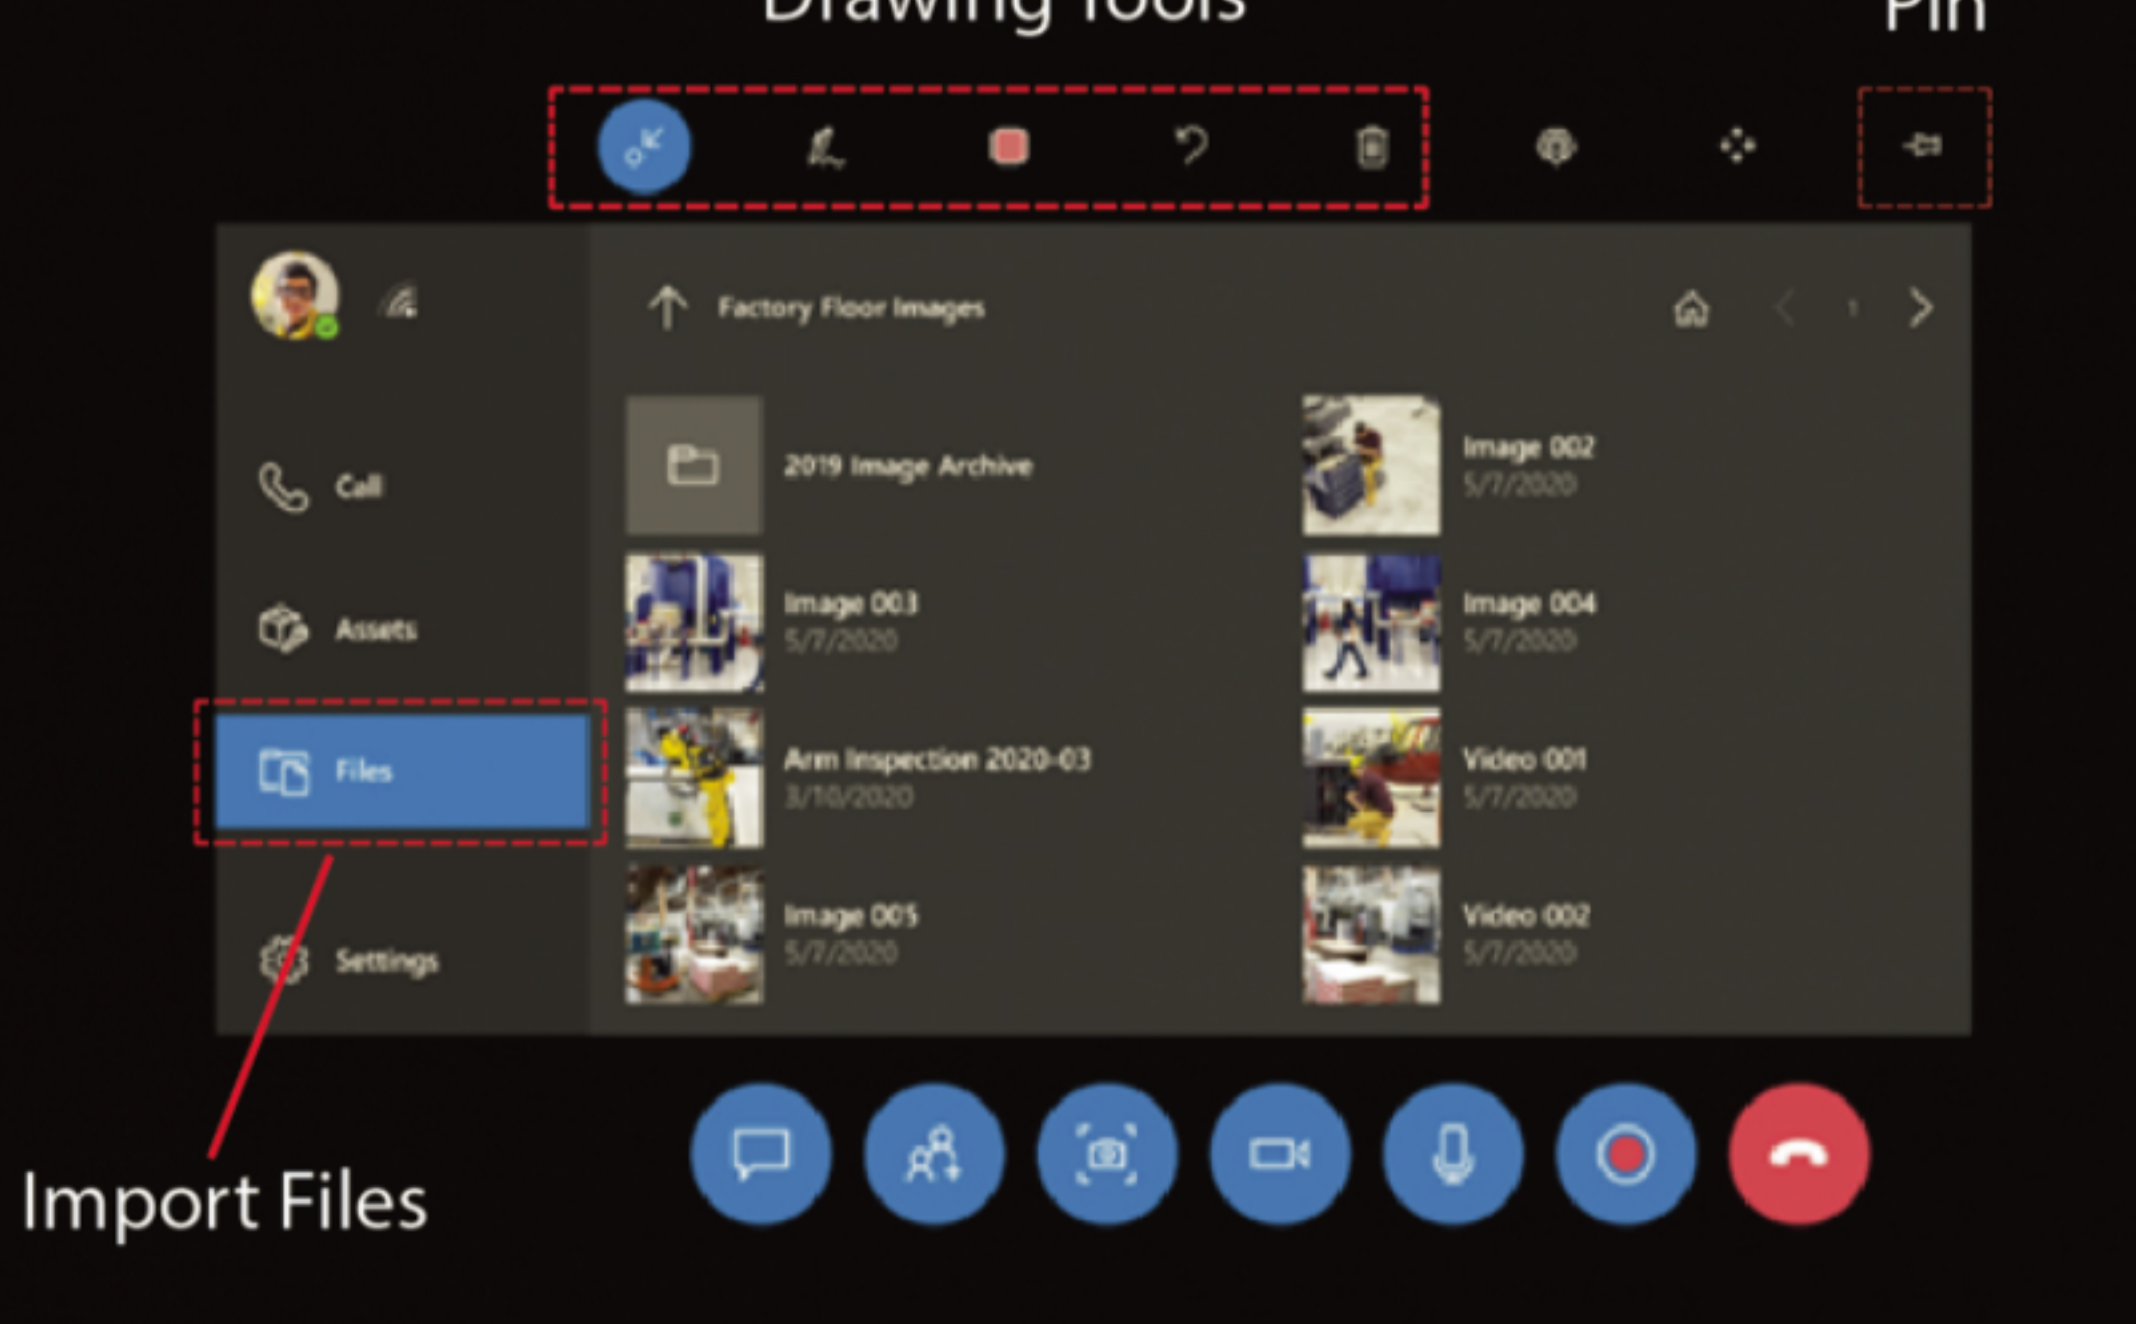

Import Files